ASW 20 B Flight Manual

Annex to the Flight Manual according to TN 37.

Operation with winglets

Annex to section IV.4. PRE-FLIGHT CHECK:

Are the winglets undamaged and secured?

Annex to section <u>IV.8. DANGEROUS FLIGHT ATTITUDES:</u>
When operated with winglets installed there will be no noticeable change to spinning behaviour.

Annex to section

VI.1. RIGGING AND LOADING WITH WATER BALLAST:

The attachment of the winglets to the wing is done by use of the "Allan Bolt" of the horizontal tail or a T-type rigging tool with a thread M 10.

Push the winglet stub into the adapter of the wing.

The winglet is correctly mounted when the safety bolt is flush with the wing nose contour.

The gap between wing and winglet is covered by plastic self adhesive tape.

Annex to section VI.2. DE-RIGGING:

Prior to derigging the wings from the fuselage the winglets have to be detached from the wing and the standard wing tips must be attached.

Annex to section VI.3. STORAGE:

For prolonged <u>parking periods</u>, even inside hangars, as well as for road transport the winglets must be detached as they are easily damaged during ground handling.

Rev.No./Date Sig. TN37/31 JAN 97 Juw Author Date Waibel June 2, 1983 Page No.

TN 37-1

ASW 20 B Maintenance Manual

Annex to the Maintenance Manual according to TN 37.

Operation with winglets

Annex to section I.3. SPECIFICATION:

Winglet

Hight 0.4 m Area 0.066 m²

Aspect ratio ≈2.4

Sweep back (trailing edge) 29°
Profile DU 94-130

Annex to section <u>II.1.1. Wings</u>:
The winglets are connected by a spigot into a bushing on the wing. This connection is secured by a spring loaded pin.

Annex to section III.2.3. Weighing report:

As the configuration with standard wing tips is the lightest one, the "Weight and Balance" procedure has to be done in that configuration!