 
 




Canopy emergency jettisoning:
push to the left the red flat
knob above the instrument panel.



Ventilation



This placard must be fitted in
the front and rear cockpit in
full view of the pilot.



OPEN rear canopy and/or EMERGENCY
JETTISONING;
Move red levers LH and RH on canopy
frame backwards.



Ventilation

Prior to take off check the
proper engagement of the
canopy locks! forward=locked

This placard must be fitted in
the front and rear cockpit in
full view of the pilot.

XIV. APPENDIX**XIV.1 Equipment List**Minimum equipment**1. Airspeed indicator**

- a. Winter GW 6005 50 - 350 km/h
- b. PZL PS 08 50 - 350 km/h

2. Altimeter

- a. Winter 4 HM 6
- b. Winter 4 FGH 10
- c. PZL W-12 S

3. Safety harness

Gadringer Bagu V-B/1
Schugu II-C/V
Bogu I-B/V front
Bogu I-A/V rear

Additional minimum equipment for aerobatics :

G-meter BM 770 L

Additional minimum equipment for cloud flying :

Turn & bank indicator Apparatebau Gauting WZ-402/
31.

Compass : Ludolph FK 5
Ludolph FK 16
PZL BS-1
PZL B-13/KJ

VHF-transceiver

- a. Dittel FSG 15/25
- b. Dittel FSG 16/25
- c. Dittel FSG 40 S
- d. Becker AR 2008/25
- e. Becker AR 2009/25
- f. Avionic Dittel ATR 720