

Adjustable Headrest:

On the front seat there is an adjustable headrest. When the backrest is used, the headrest is inserted into the base part at the backrest. The headrest is secured in the correct height with the locking pin. Without backrest, the headrest is inserted through the cutout in the instrument cover of the rear instrument panel. A ball catch must lock in noticeable.

The headrest is adjusted correctly, when the head can touch the headrest on eyelevel.