


- Subject:** Installation of oversize drag pins on the rear wing connection
- Applicability:** All ASK 21 B, Data Sheet No. EASA.A.221
- Urgency:** If required
- Action:**
1. Derig the glider.
 2. To be able to safely ream the new holes, the safety clips have to be removed at the root ribs.
 3. Then rig the glider as usual and support the wings by use of wing stands or equivalent (saw horses, trailer dollies) such that the drag pins can be easily removed and inserted.
 4. Take one drag pin out, ream the oversize hole and insert new drag pin.
 5. Do the same on the other side.
 6. Derig the glider.
 7. Fix the safety clips again.
- Note:** The following pin diameters are available at the manufacturer Alexander Schleicher: Ø11.95 / 12.0 / 12.1 / 12.2 and 12.3 mm.

Poppenhausen, 15.06.18

ALEXANDER SCHLEICHER
GmbH & Co.

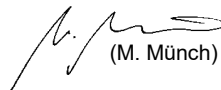

(M. Münch)