



Rudder pedal adjustment :
Grey knob RH of control
stick.

To move pedals back :

Take load off pedals and pull back. Release control knob suddenly and put slight pressure on pedals to adjust them.

To move pedals forward :

Pull knob and simultaneously push pedals forward. Release control knob suddenly and lock in place by putting slight pressure on pedals.

Wheel brake: brake lever at the control stick (not applicable if T.N. no.13 is accomplished)*.



Ventilation :
Light blue knob LH above instru-
ment panel.




Water ballast :
Dark blue lever LH and RH on upper
cockpit wall. To open valve move
lever forward.

Anchoring point for parachute static line :

Red ring on main bulkhead !

* Wheel brake actuation connected to airbrakes (T.N.no.13):

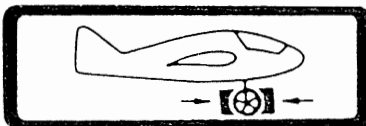

The wheel brake is operated by
the final third of the move-
ment of the airbrake lever.

Pull to brake !