

I.3 CONTENTS

- I. General
- I.1 Log of revisions
- I.2 Pages included
- I.3 Contents
- I.4 3-Side-View
- I.5 Description

(Beginning of JAR22-required and LBA-approved part.)

- II. Operating limitations
 - II.1 Airworthiness category
 - II.2 Permitted operations
 - II.3 Minimum equipment
 - II.4 Airspeed limitations & load factor limits
 - II.5 Crew
 - II.6 Weights
 - II.7 In flight C.G. range
 - II.8 Weight and balance information
 - II.9 General survey drawing 1 : 50
 - II.10 Placards and instruments color codes
 - II.11 Description of symbolic placards
- III. Emergency procedures
 - III.1 Recovery from spin
 - III.2 Canopy jettisoning & emergency bailout
 - III.3 Flights through precipitation
 - III.4 Wing dropping
 - III.5 Ground looping
- IV. Normal operating procedures
 - IV.1 Cockpit layout and controls
 - IV.2 Daily inspections
 - IV.3 Checks prior to take off
 - IV.4 Take off
 - IV.5 Free flight
 - IV.6 Low speed flight and wing dropping
 - IV.7 High speed flight
 - IV.8 Approach and landing
 - IV.9 Aerobatics

- V. Rigging and de-rigging
 - V.1 Rigging
 - V.2 De-rigging
 - V.3 Parking
 - V.4 Road transport
 - V.5 Preventive maintenance

- VI. Center of gravity
 - VI.1 Weighing procedure for empty weight C.G.
 - VI.2 Empty weight C.G. range
 - VI.3 Weighing record
 - VI.4 Calculation of the in flight C.G.

Appendix

Flight polar

Lubrication Scheme

Rigging data (for adjustment of control surfaces, etc.)

IV.2 DAILY INSPECTIONS

Prior to flight operations the following checks must be accomplished:

- 1.a. Open canopy! Check that the main pins are properly secured.
 - b. Check the proper connection of the ailerons and airbrakes through the access hole on the left side above the wing. Are the quick-release connectors secured with spring clips ?
 - c. Check for foreign bodies !
 - d. Check the control circuits force and that all controls are free-moving. Apply full deflections and load the control circuits with fixed controls and airbrakes. Check the plastic tubes inside the S-shaped rudder pedal tubes for proper and tight fit.
 - e. Check tire pressure:
 - Nose wheel 2,0 bar (28 psi)
 - Main wheel 2,7 bar (38 psi)
 - Tail wheel (If installed) 2,5 bar (35,6 psi).
 - f. The condition and function of the tow release mechanism is to be checked. Actuate the tow release: does it snap back freely ? Engage and disengage the ring pair. Check the automatic release of the C.G. towing hook with the ring pair which must release automatically backwards.
 - g. Check the wheel brake. Pull the airbrake lever; at the end of its travel an elastic resistance must be felt.
- 2.a. Check upper and lower wing surface for damages !
 - b. Aileron: its condition, free-movingness and play is to be checked ! Check also the pushrod connection.
 - c. Airbrake: its condition, fit and locking is to be checked.
3. Check the fuselage for damages, in particular also the bottom side.
 4. Check that the tailplane is properly assembled and secured. Check also the pushrod connection ! Secured with spring clips ?



[Handwritten signature]
- 3. NOV. 1987

5. Check condition of tailskid, pitot tube and venturi tube.
6. Check static vents for cleanness !
7. After rough landings or excessive flight stress the whole sail-plane must be checked with the wings and the tail unit being removed (see also point 2.)!). If any damage is found, a technical aviation inspector must be called in. On no account one must take off again before such damage has been repaired.
See also the Instructions For Continued Airworthiness !!

IV.3. CHECKS PRIOR TO TAKE OFF

See the Check Lists in Section VII., p.43, of the Instructions For Continued Airworthiness !



[Handwritten signature]
- 3. NOV. 1987

V. RIGGING AND DE-RIGGING

V.1 RIGGING

Rigging the ASK 21 can be carried out by four persons without mechanical assistance, and by three persons with the use of a fuselage stand or a wing support.

Prior to rigging, clean and grease all pins, bolts, bushings and control system connections.

1. Set up the fuselage and hold it horizontal.
2. Plug the spar fork of the left wing into the fuselage and - if available - place a wing support under the wing end.
3. Offer up the right wing and align the main pin fittings.
4. Press in the main pins and secure. Never insert the rear wing attachment pins prior to the main pins !
5. Press in the rear wing attachment pins; unscrew the T-tool and check whether the safety lock is engaged.
6. Connect and lock the aileron control linkages in the fuselage behind the spar tunnel. You must be able to touch the ball pivot by feeling through the slot in the socket. Also check the proper engagement of the safety lock by pushing it on to close ! Secure them with spring clips!
7. Connect and lock the airbrake control linkages in the fuselage behind the spar tunnel. Secure them with spring clips!

8. The tailplane is fitted onto the fin from the front. (see Fig. V.2-1 and V.2-2).
Now the Allan bolt at the leading edge is screwed in; this should be screwed in tightly until the spring-loaded safety pin snaps out over the screw head as far as the socket.
9. Connect the elevator and safety with a spring clip !

Note, if your glider uses an automatic elevator connection: after cleaning and lightly greasing the plug-in elevator connections, the tailplane is fitted onto the fin from the front; both elevator panels must be fitted into their connectors simultaneously. Then the tailplane is pushed back until the Allan bolt at the leading edge can be screwed in; this should be screwed in tightly until the spring-loaded safety pin snaps out over the screw head as far as the socket.

10. Carry out a pre-flight check referring to the Check List (see Section VII, p.43, of the Instructions For Continued Airworthiness !
11. The control circuits must be subjected to an operational test.
12. Check condition and function of the wheel brake; check the tire pressure.
See also Section IV.2 DAILY INSPECTIONS in this Manual.

V.2 DE-RIGGING

De-rigging is carried out in the reverse sequence to that of rigging. It must be taken care that the rear wing attachment pins have to be removed prior to the main pins.

WARNING: For derigging the horizontal tail from the fin it has to be regarded that only the method according to Fig. V.2-2 is used.

Fig. V.2-1
WRONG: Twist movement


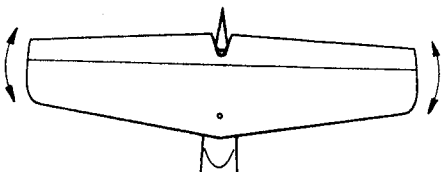


Fig. V.2-2
RIGHT: Pitch movement

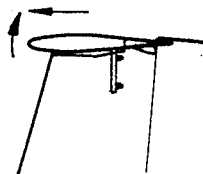




V.3 PARKING

When parking the glider, the canopies have to be closed !

When an ASK 21 is parked on an airfield in the sunshine (this must also be observed during the waiting time until take-off when the pilots are already on board) the canopies must not be left open for some time.

Tailheavy static balance measurement of controls.

$$M = P \cdot r \text{ (daN} \cdot \text{cm)}$$

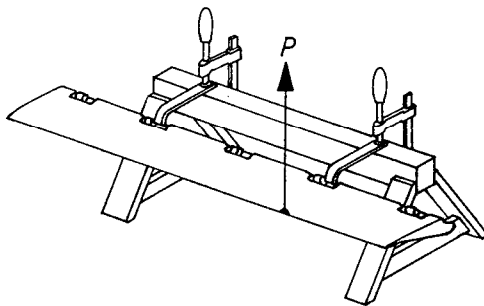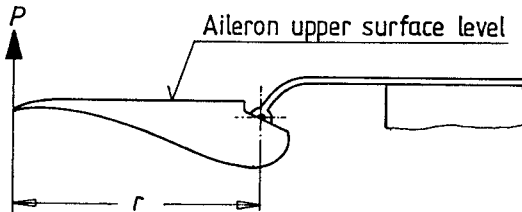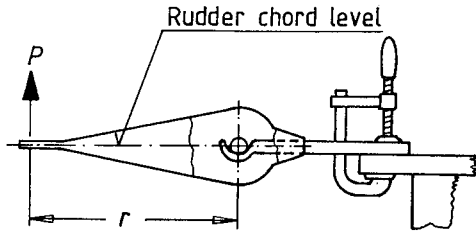

Determination of P by use of a spring balance or a letter balance.

VII. CHECK LISTS

Pre Flight Check

1. Main pins safetied ?
2. Rear wing attachment pins: is the safety lock visible above the pin ?
3. Horizontal tail unit pins safetied ? Is the spring retainer engaged ?
4. Elevator pushrod connected ? Safetied with a spring clip ? This is not applicable for gliders which use the automatic elevator connection !
5. Aileron pushrods connected ? Safetied with a spring clip ? Do not forget the sight control through the access hole cover !
6. Airbrake pushrods connected ? Safetied with a spring clip ? Do not forget the sight control through the access hole cover !
7. Check for foreign objects !

Attention !

With all **HOTELLIDER** quick-release joints one must be able to touch the ball pivot by feeling through the slot in the ball socket. Check the proper engagement of the safety lock by pushing it on to close !

Pre Take Off Check

1. Parachute connected to harness ?
2. Safety harness fastened ?
3. Airbrakes locked ?
4. Trim neutral ?
5. Altimeter correctly set ?
6. Canopies closed and locked ? Rear Canopy !!
7. For flights with only one occupant remove the rear back rest !!
8. Leave your toes **under** the pedal toe-straps ! Never flatten the straps ! Danger of jamming the pedals !

VIII. PERIODICAL INSPECTIONS

The following maintenance checks have to be carried out periodically, however, imperatively at the latest annually :

1. Check the whole glider - outside and inside where accessible - for cracks, holes, dents and white spots in the fiberglass.
2. The attachment hinges and pins must be checked for corrosion, tool marks and play. If the front shear pins of the wing/fuselage junction show too much lateral play due to ground loopings, thin metal washers must be added on these pins. The spar pins must show some play, otherwise the wings possibly cannot be rigged at all with different temperatures. Besides here the bearing pressure is so low that there is no danger of wearout.

On the other hand the rear pins of the wing/fuselage junction require more attention. In the case of play (backlash) at these pins they have to be replaced in time against oversize pins. The play at these pins always should be within the tolerances H7/g6.

Good preventive maintenance will increase considerably the service life of all pins and fittings. Always clean and relubricate the pins prior to every rigging. Do not misalign the pins !

3. Check all metal parts for corrosion and, if necessary, repaint them. As priming a zinc-chromate prime has to be used.
4. Make sure that there is no play in the wing/fuselage attachment and in the tail unit/fuselage attachments (see also above point 2).

4. Check that there is no play in the fuselage/wing and fuselage/tailplane connections (see also above Point 2.).
5. The condition of all accessible bearings, fittings, joints, stops in the control linkages, and especially the control cables and towing hook cables, must be checked.
The plastic tubes inside the S-shaped rudder pedal tubes must be checked for proper and tight fit !
6. The controls, including the airbrakes, must be subjected to an operational test, and their control deflections measured.
7. If any control is not free-moving over its entire range of movement, then the cause is to be established and eliminated.
8. The condition of the main landing gear and tailskid (foam skid with wear plate or pneumatic tailwheel respectively) including tire, brake linings, and rubber shock absorber must be checked. See also that there is sufficient brake fluid in the tank.
9. The towing hooks must be inspected according to the manufacturer's "operations and maintenance instructions".
10. The pressure openings (pitot and static pressure ports) on the fuselage, including their flexible lines, are to be checked for blockages and leaks.
11. Condition and function - if applicable, maximum permissible operational time - of all instruments, VHF-transceiver unit, and other equipment are to be checked !
12. The wing bending frequency is to be measured and compared with the stated value in the latest inspection report. For this test the fuselage must be rigidly supported on two supports, in order to obtain comparable values; for the position of the supports see the Survey Drawing on page 29.
13. Check that the equipment and instrumentation are in accordance with the Equipment Inventory (Section XIV. APPENDIX of this manual).
14. After repairs or alterations to the equipment the new empty weight and the C.G. position are to be found by calculation or weighing, and are to be recorded in a summary of weights.

Checking and securing the L'HOTELLIER quick-release connectors in the control linkages

1. **Securing**

Past experience showed that the quick-release connectors in the airbrake, aileron and particularly in the elevator control linkages were incorrectly assembled or that their assembly was even completely forgotten (as of serial no. 21206 the aircraft was then supplied with an automatic elevator connection). A sticker (Fig.1) fixed to the fin and the access hole cover, serve to remind the pilot of the correct assembly. All quick-release connectors must be secured in addition by means of a spring clip (Fig.2). With the older type of connectors the check hole must be drilled to approx. 1,2 mm \varnothing for this purpose.

Fig. 1


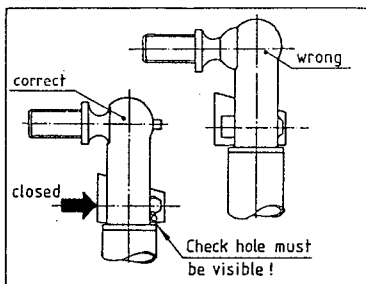


Fig. 2

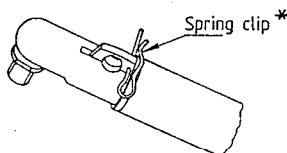



* Spring clip no.50030771 can be ordered from Alexander Schleicher or from the company A.Würth, P.O.Box 1261, D-7118 Künzelsau.

(This part is also identical with the FORD brake securing spring clip).


Instructions For Continued Airworthiness Schleicher ASK 21

2. Inspection

As experience accumulated in Australia has shown, the condition of the L'HOTELLIER quick-release connectors must be checked on every annual inspection of the aircraft, especially when it has been operated frequently and from sandy airfields.

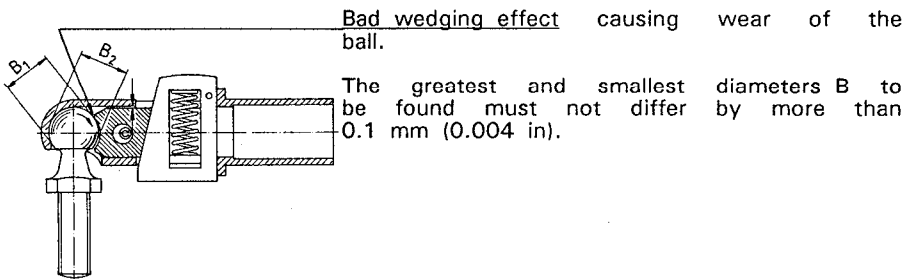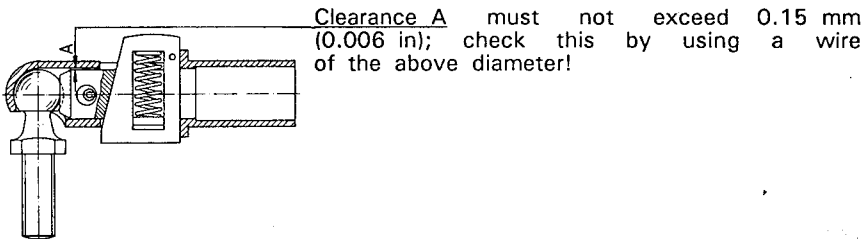

The tight seat of the ball ends inside the fittings must be checked as loose ball ends are likely to break under bending loads in the thread area.

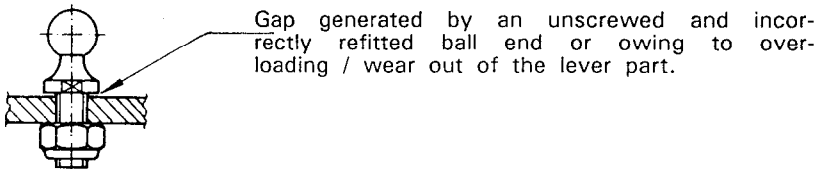

NOTE: The Technical Note "Technical Data No. IM.10.01A, Issue B 01/89", by the manufacturer L'HOTELLIER must be observed!



OPEN rear canopy and/or EMERGENCY
JETTISONING:
Move red levers LH and RH on canopy
frame backwards.



Ventilation

Prior to take off check the
proper engagement of the
canopy locks! forward=locked

This placard must be fitted in
the front and rear cockpit in
full view of the pilot.

XIV APPENDIX

XIV.1 Equipment List

Minimum equipment

1. Airspeed indicator

- a. Winter GW 6005 50 - 350 km/h
- b. PZL PS 08 50 - 350 km/h

2. Altimeter

- a. Winter 4 HM 6
- b. Winter 4 FGH 10
- c. PZL W-12 S

3. Safety harness

Gadringer Bagu V-B/1
Schugu II-C/V
Bogu I-B/V front
Bogu I-A/V rear

Additional minimum equipment for aerobatics :

G-meter BM 770 L

Additional minimum equipment for cloud flying :

Turn & bank indicator Apparatebau Gauting WZ-402/
31.

Compass : Ludolph FK 5
Ludolph FK 16
PZL BS-1
PZL B-13/KJ

VHF-transceiver

- a. Dittel FSG 15/25
- b. Dittel FSG 16/25
- c. Dittel FSG 40 S
- d. Becker AR 2008/25
- e. Becker AR 2009/25
- f. Avionic Dittel ATR 720